




### **CA-SPR installation instructions:**

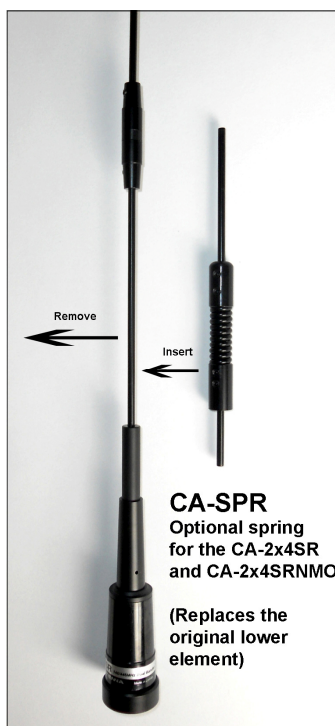

- 1) **Loosen the set screws in the base of the antenna and from the lower phasing section and remove the lower rod section of the antenna.**
- 2) **Insert the short rod included with the CA-SPR kit into the base of the antenna and tighten the set screws securely.**
- 3) **Slide the spring down onto the lower rod and tighten the set screws securely**
- 4) **Attach the upper section of the antenna to the top of the spring section tightening the set screws securely.**